


78-612-225 PEEL AND
STICK GASKET.

WHEN INSTALLING LATCH ON
FREEZERS, ATTACH GASKET
TO BACK OF LATCH
AS SHOWN TO SEAL AGAINST
DOOR SURFACE AROUND
LATCH INSIDE RELEASE
HOLE.

FILL INSIDE RELEASE HOLE
THRU DOOR WITH LOW
TEMPERATURE GREASE TO
LIMIT AIR INFILTRATION
AND ICE FORMATION.

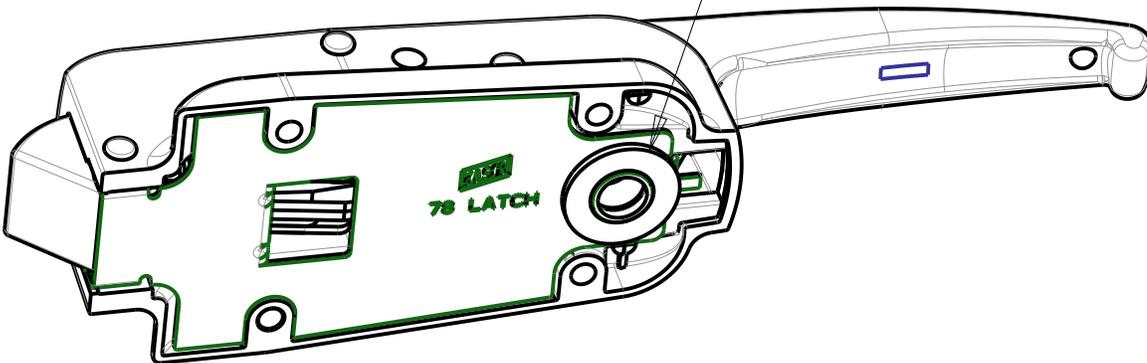

USE THE FOLLOWING INSIDE RELEASE MODELS
ON THE 78 & 778 LATCHES:

481C, 482C, 486C, 487C, 489C